

# Software User Guide

## for measuring and testing of thermoforming sheets

# SMTTest-BASIC



Keep for later use!

**LABORTECH, s.r.o.**

Rolnická 1543/130a  
747 05 Opava-Kateřinky  
Czech Republic

Tel. +420 553731956

Email: [info@labortech.cz](mailto:info@labortech.cz)

[www.labortech.cz](http://www.labortech.cz)

All rights reserved. No part of the work may be reproduced in any way (printing, photocopy, microfilm or other process) or stored, processed, reproduced and distributed with the help of electronic systems without the permission of LABORTECH, s.r.o.

Warning: The manual may contain links to optional options that your software does not have.

## Content

1	General instructions .....	4
1.1	Software manufacturer and designation .....	4
1.2	Copyright .....	4
2	Description of software .....	5
2.1	Main screen .....	5
2.2	Main bar .....	6
2.2.1	Description of individual functions of the main control bar .....	6
2.3	Operation screen .....	8
2.3.1	Control set button description .....	8
2.3.2	Printing .....	<b>Chyba! Záložka není definována.</b>
2.3.3	Filter .....	12
2.3.4	Column settings .....	13
2.4	Chart .....	<b>Chyba! Záložka není definována.</b>
2.5	Status bar .....	155
2.5.1	List of reports .....	<b>Chyba! Záložka není definována.</b> 6

# 1 General instructions

## 1.1 Software manufacturer and designation

The operating instructions are part of the subject of delivery and at the same time an important technical manual for the correct use of the EC series machine software for measuring and testing thermoforming sheets and for achieving full functional utility.

LABORTECH, s.r.o.  
Rolnická 1543/130 a  
747 05 Opava-Kateřinky  
Czech Republic  
Tel.: +420553731956  
E-mail: [info@labortech.cz](mailto:info@labortech.cz)  
http: [www.labortech.cz](http://www.labortech.cz)

On the following pages, the full company marking is replaced by "manufacturer".



## 1.2 Copyright

SMTTest software is the intellectual property of LABORTECH, s.r.o.

All rights of SMTTest software: principles of operation – algorithms, relevant screens, etc. are owned by the manufacturer and are subject to copyright law. According to the provisions of copyright, law and competition, reproduction is permitted only with the prior written consent of the supplier.

The supporting documents shall not be made available for inspection by unauthorized third parties.

With regard to supplier documentation, commercial copyright regulations apply.

## 2 Software description

SMTTest is a complete software for collecting, collecting, exporting and printing data.

### ATTENTION!

Do not install any additional software!

Installing additional software may compromise the functions of the measuring machine and the security of the stored data.

### 2.1 Main screen

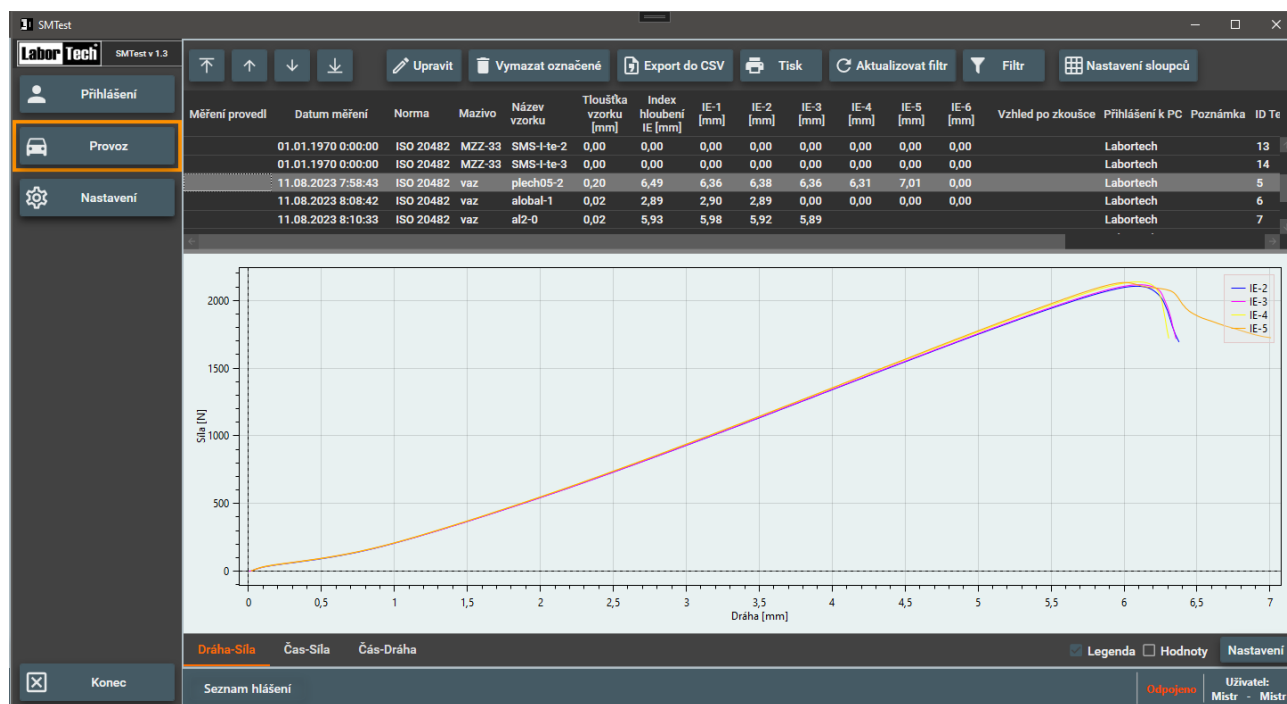


Figure 1: Main program screen

On the main screen you will find the main control bar and the operation screen (after its launch).

## 2.2 Main bar

The basic screen contains a main bar with four control programs.


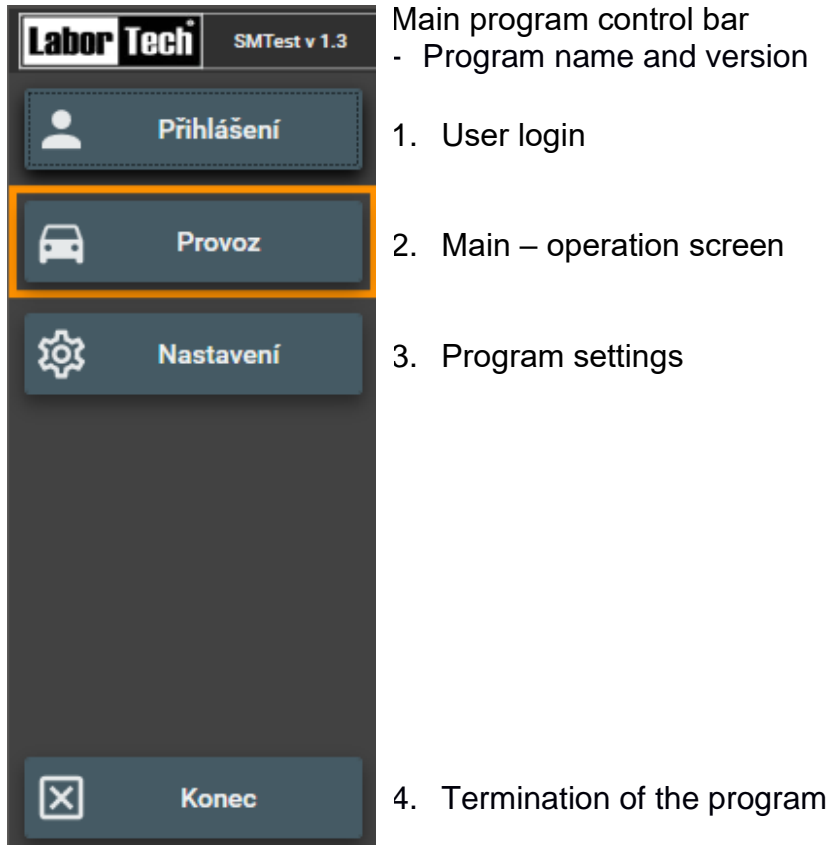



Figure 2: Main Program Control Toolbar

### 2.2.1 Description of individual functions of the main control bar

 

Program user login. After pressing the button, the login query for the current user is opened first (if logged in). Subsequently, a dialog box for the login of the new user is invoked.


Figure 3: User Login Button

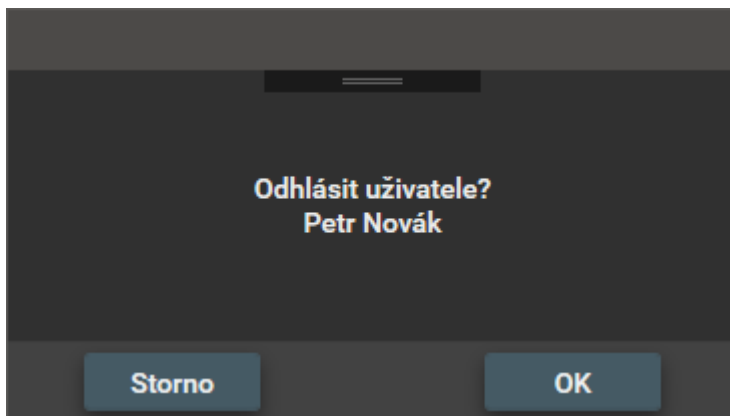

Pressing the "OK" button will log out the current user.

The "Cancel" button closes the dialog box without logging out of the user.


Figure 4: Current User Logout Window

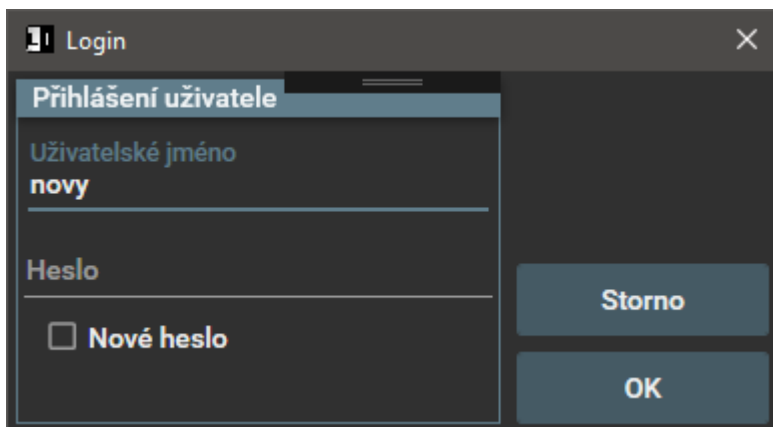

User logon dialog box. In the "Username" line, enter the user name. On the "Password" line, then the password. By pressing the "OK" button, a new user will be logged in.


If you want to change your password, click on the "New password" box – see. The following picture.

Figure 5: User login window

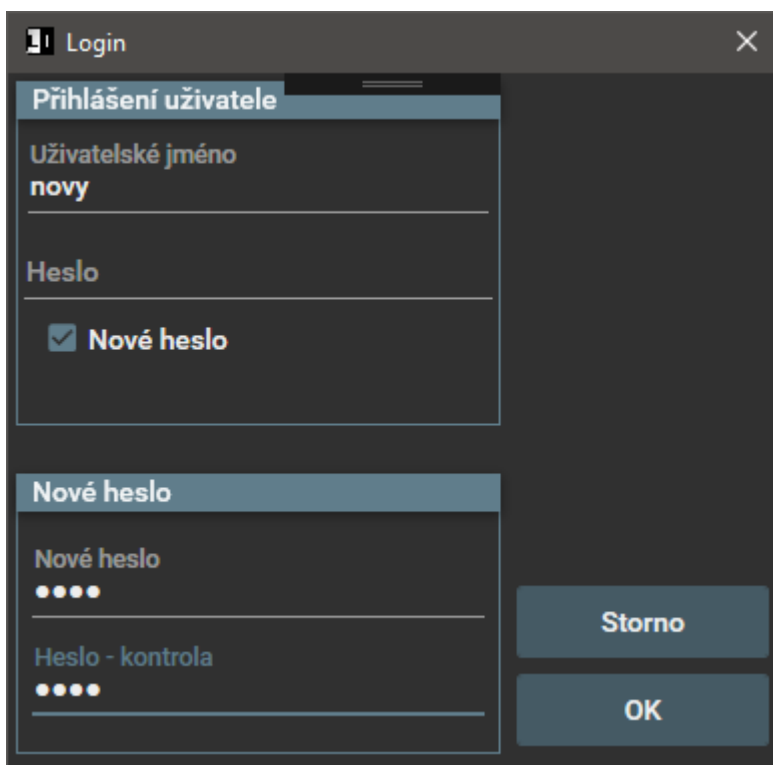

Before changing the user's password, the current password must first be entered in the "Password" field. Then "New password" and its check "Password-check". After pressing the OK button, the password will be changed and the user will be logged in at the same time.

 Figure 6: Entering a New User Password



Selection of the operating screen. After pressing the button, the program operation screen is displayed in the working part of the window.

Figure 7: Operation screen selection button

## 2.3 Operation screen

The operation screen is divided into three parts:

1. Pushbutton control kit
2. List of measured values
3. Chart

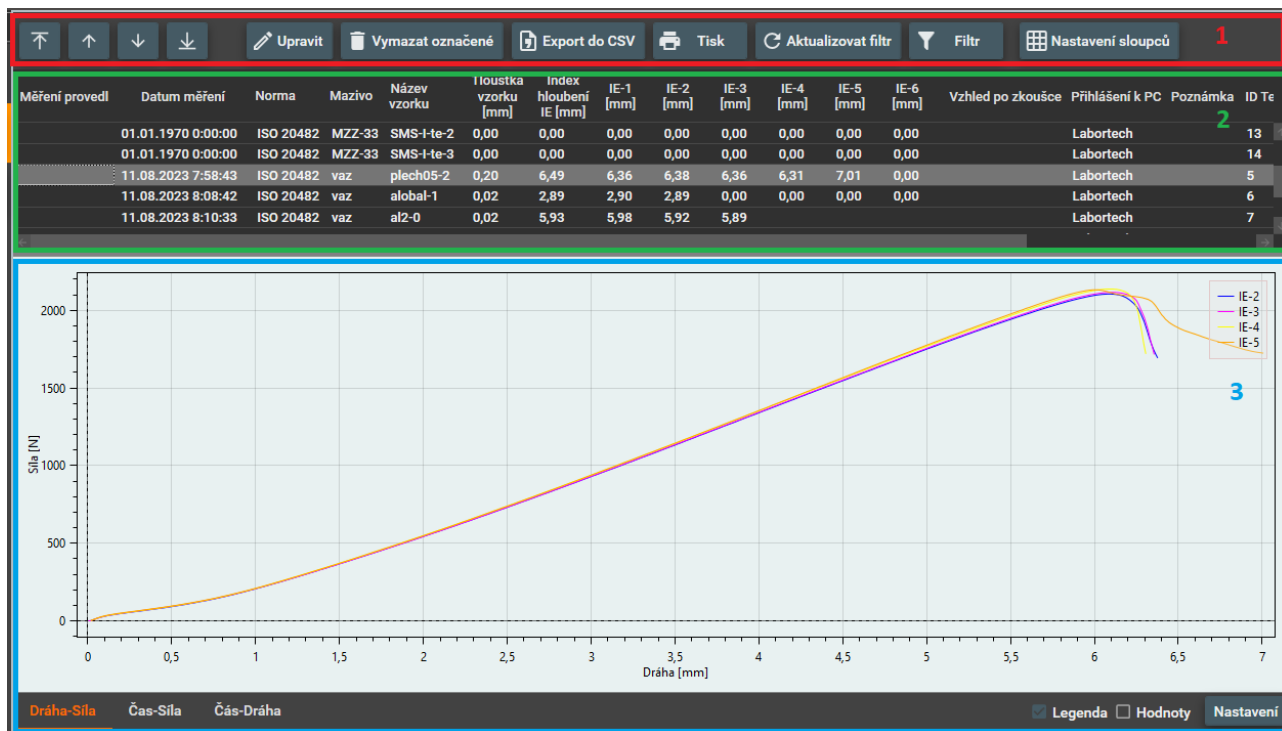


Figure 8: Program Operation Screen

### 2.3.1 Control set button description



Figure 9: Buttons for setting the focus line

To simplify viewing the measured values, if the computer is equipped with a touch monitor, it is possible to use the control buttons to set the active line.


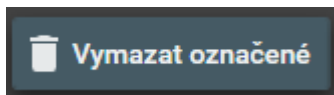


Figure 10: Button to delete marked records


Button to clear marked records. To prevent accidental deletion of data, this button is displayed only for users with "Master" rights.



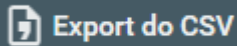


Button to export selected rows to CSV (ASCII text) file and possible further processing, e.g. in Excel.

 *Figure 11: CSV  
export button*




Button to display the print settings window and to print the selected lines. For example, if two lines are marked, both will be printed on one side as one chassis. For a detailed description of the print settings window, see. below.

 *Figure 12:  
Print button*




The button allows you to filter the measured data. For a more detailed description of the filter settings window, see. below.

 *Figure 13:  
Data filtering*



Tlačítko pro případnou aktualizaci filtru naměřených dat.

*Figure 14: Filter  
update button*

 

*Figure 15: Column  
Display Settings*

Button to set the display of columns. Allows you to enable or disable the display of a column, or change the column width setting. You can change the order of the columns by using the mouse. For a more detailed description of the column settings window, see. below.

## 2.3.2 Printing

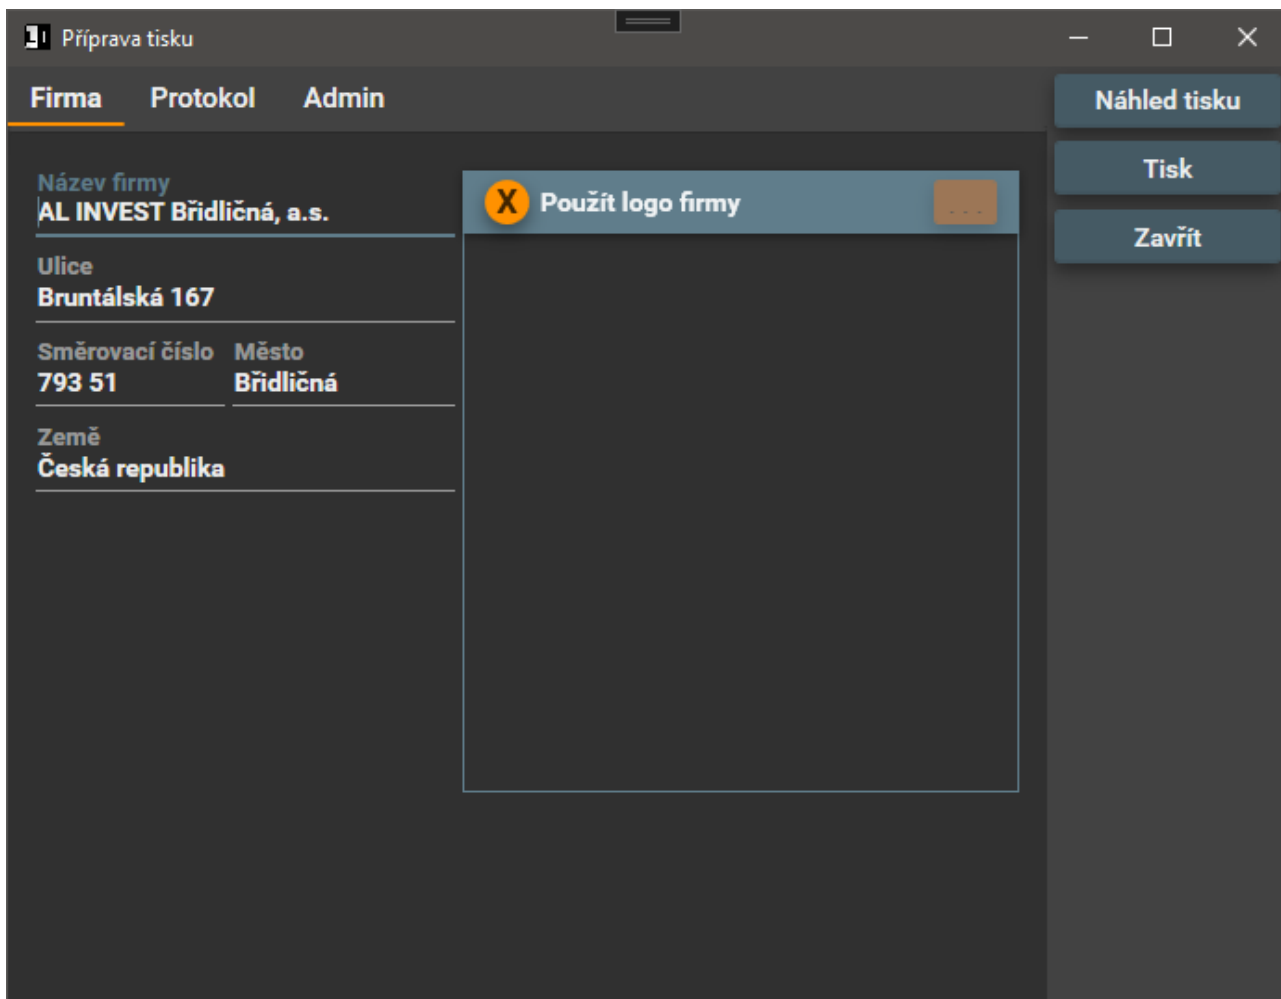


Figure 16: Print Settings Window

In the "Company" tab you will enter the address of the company that performs the measurement.



**Použít logo firmy**

Button to enable the display of the company logo in the print report.



Orange button to find the company logo on the local disk of the computer. The program supports common types of graphic formats (jpg, bmp, gif). For the correct display and placement of the logo on the print report, the logo should have a square format.

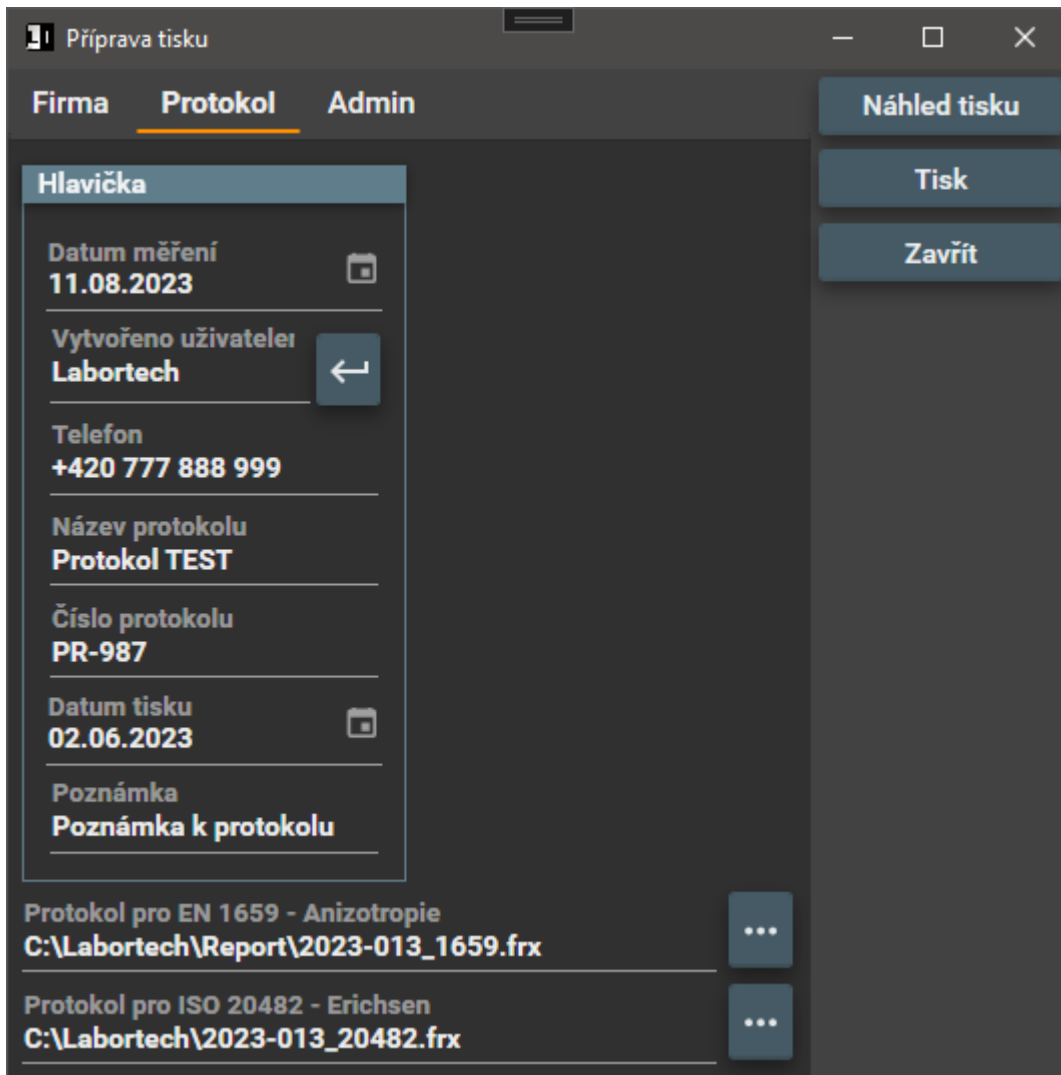


Figure 17: Printing, "Log" tab

The "Protocol" tab contains the date of measurement, the name of the user who performed the protocol printing, telephone number, name and protocol number, date of printing the protocol and note. These values will then be displayed on the resulting output report.




Displays a preview of the log before printing. Here it is possible to select a printer or another way of output.

Print directly to the printer

Closing the report without printing

Figure 18: Protocol charms

### 2.3.3 Filter

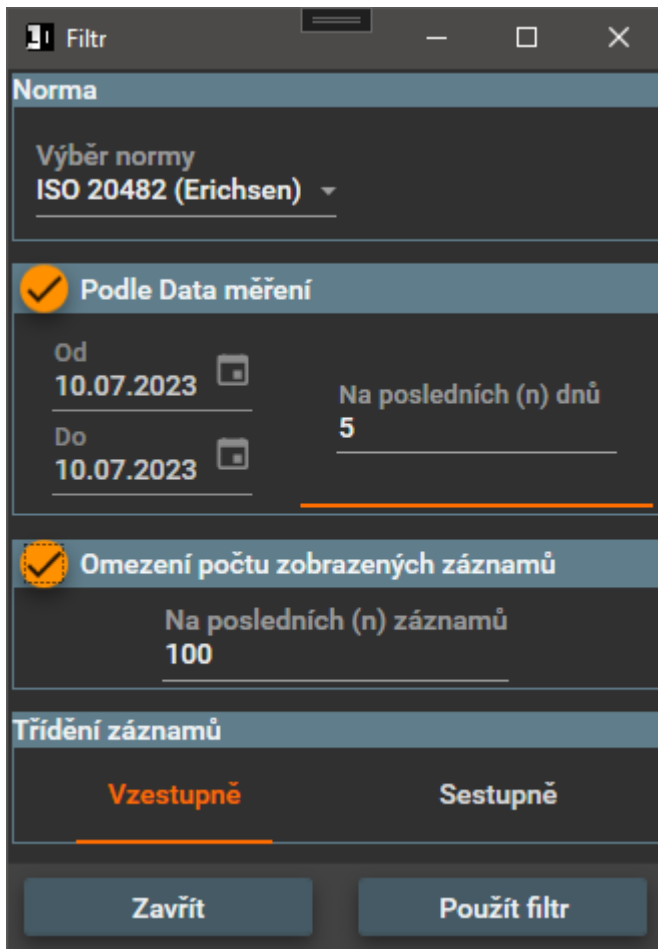

The data filter settings window consists of several parts that allow you to select and display measured data from the archive according to various parameters.



Use this button to enable or disable the appropriate filter. If a filter is not enabled, part of its window is grayed out and you cannot make changes to it.

Possibility to filter data by:

1. Norm. Possibility to display data according to the given standard.
2. Measurement data. Here you can choose the range of the measurement date (in the left column) or the display of the last few days. The choice is made by clicking on the bottom of the line – see. highlight.
3. Limit the number of records displayed. This option is used when a large number of records would be filtered out.
4. Alphabetical sorting of records in ascending or descending order.
5. The "Apply filter" button activates the set data filter, and the "Close" button closes the filter window.

### 2.3.4 Column settings



Název	Šířka	Zobrazit
Datum měření	132.9	<input checked="" type="checkbox"/>
Montáž provedl	99.5	<input checked="" type="checkbox"/>
Číslo montáže	64.7	<input checked="" type="checkbox"/>
Typ vozu	45.1	<input checked="" type="checkbox"/>
Typ podvozku	76.9	<input checked="" type="checkbox"/>
Číslo převodovky	78.6	<input checked="" type="checkbox"/>
Číslo podvozku	73.2	<input checked="" type="checkbox"/>
L Montáž	56.6	<input checked="" type="checkbox"/>
L Kolo	36.8	<input checked="" type="checkbox"/>
L Vnější vložka	54.3	<input checked="" type="checkbox"/>
L Vnitřní vložka	48.8	<input checked="" type="checkbox"/>
L Disk	35	<input checked="" type="checkbox"/>
L Disk ok	43.4	<input checked="" type="checkbox"/>
L Číslo monobloku	80.6	<input checked="" type="checkbox"/>

Figure 19: Column Display Settings Window

Window for possible settings to enable display and column width. Enabling or disabling the display of individual columns can be done in the "View" checkbox.

The column widths can be adjusted on the operation screen using the mouse. If the computer is equipped with a touch screen monitor and the mouse is not available, it is possible to set the column widths manually by entering the appropriate value in the "Width" column

Button description:

1. "Mark all" - marks all rows, i.e. all columns will be displayed
2. "Unmark" will delete the markup in all rows, so no column will be displayed.
3. "Cancel" - closes the window without making changes.
4. "Apply" - applies the changes made – the result is immediately visible on the appearance of the table with the measured data.
5. "OK" - applies the change and closes the window.

## 2.4 Chart



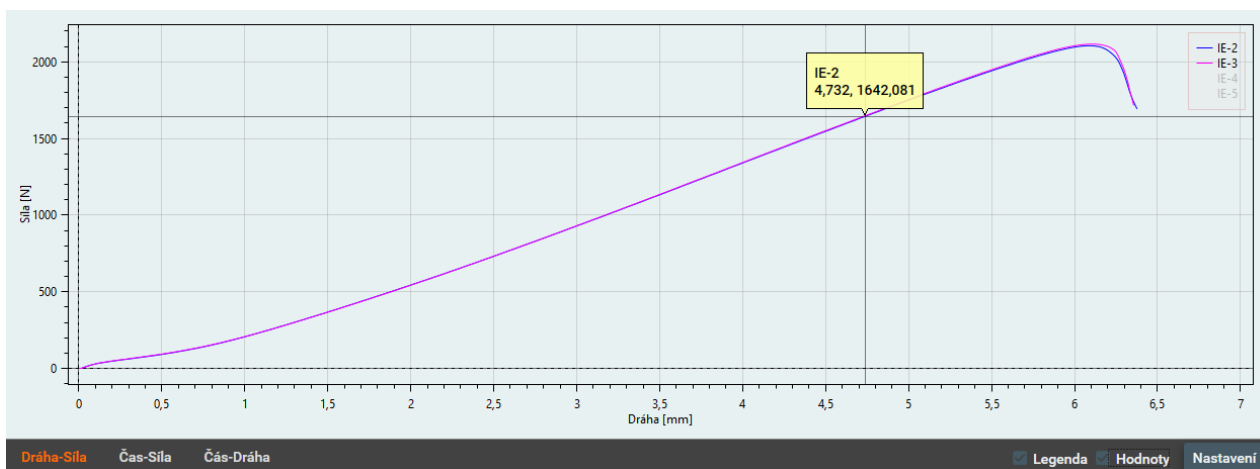



Figure 20: Graph including control

 


Three options for switching chart type

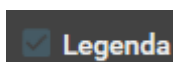

 View the names of each waveform. The legend is displayed in the upper-right corner of the chart. Click each title to show or hide the charts.



 If this checkbox is checked, the current value from the graph is displayed at the mouse position.



Displays a window with settings of basic parameters of the chart.

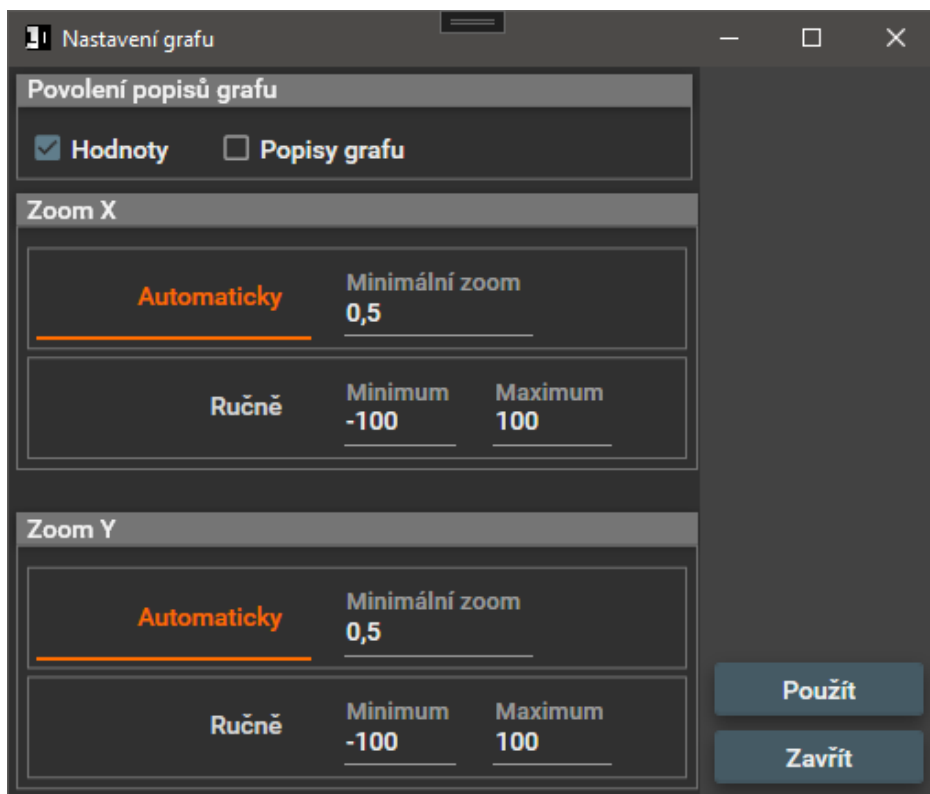


Chart display settings:


Enable descriptions:

Detailed chart descriptions, if the chart contains them, are displayed.

Zoom (X,Y):


The zoom setting has 2 options: Automatic and Manual. In automatic mode, the zoom changes automatically so that the signal progress is always visible. In manual mode, axis ranges with fixed values are selected.

 Figure 21: Chart Settings



After pressing the button, the program settings are displayed in the right, working part of the window.

Figure 22: Program Settings Button

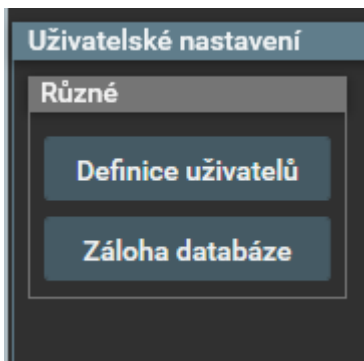


Setting up the program is very simple. Use the "User definition" button to enter new users into the database. Use the "Database backup" button to back up the user database and measured values to the computer's internal disk.

Figure 23: Program User Settings


## 2.5 Status bar



Figure 24: Status Bar

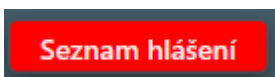

 
Lists active machine messages, see. below. Alternatively, the machine's reporting history can also be displayed.



Last active machine report. If any machine message is active, the "Reset" button is also displayed. Pressing this button will then clear the list of messages. If the error persists, the deleted messages will appear back.



 Information whether the computer is connected to the machine. In this case, it is disconnected and data collection is not active.



Currently logged in user – name – rights.

## 2.5.1 List of reports

### 1. Error messages

The "error messages" tab displays a list of active program error messages. These messages can be reset by the "Error reset" button.

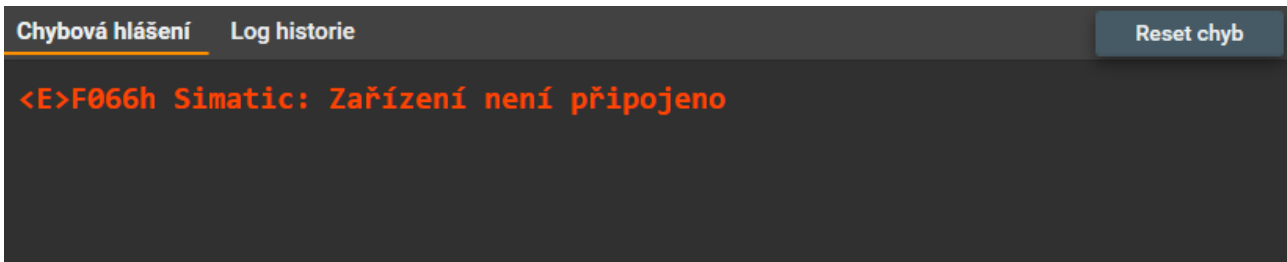


Figure 25: "Error Messages" tab

### 2. Log history

Important functions of the program are logged to a file. It is used, for example, to perform diagnostics in the event of an error, or to check the functions of the machine.


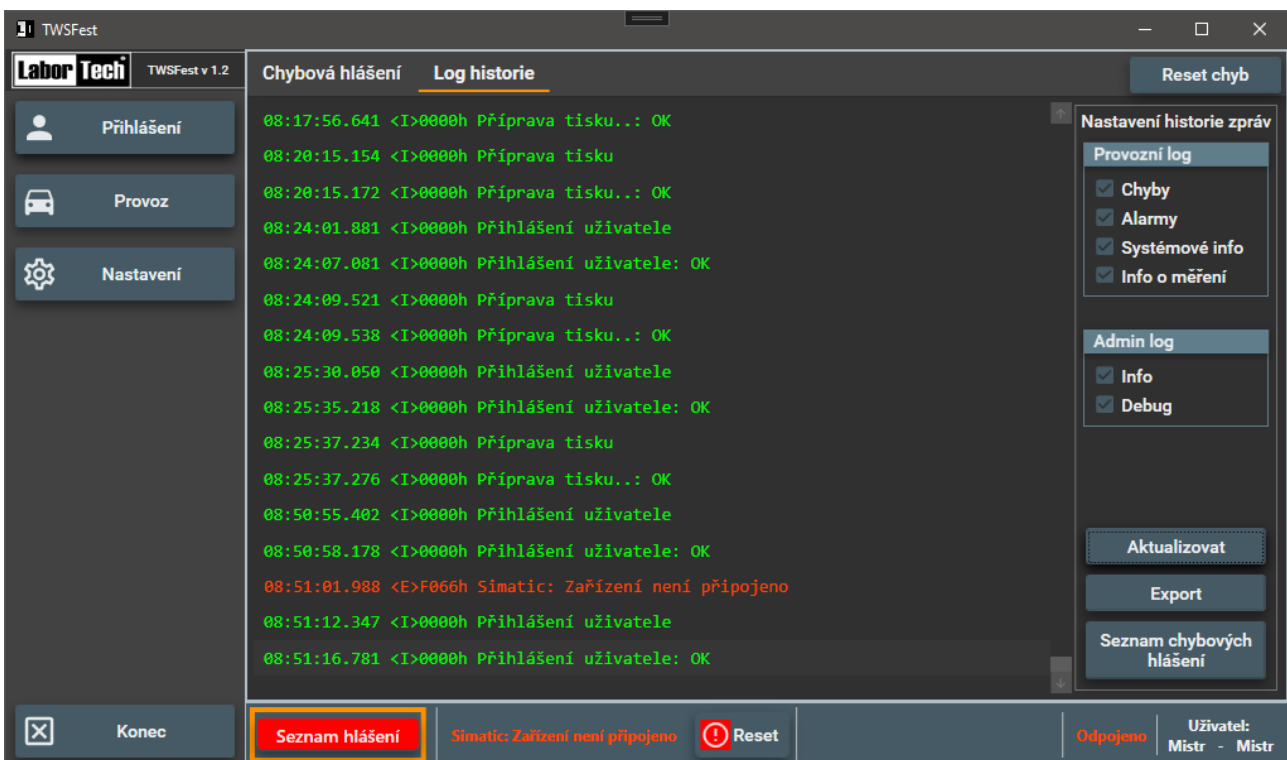



Figure 26: "History Log" tab



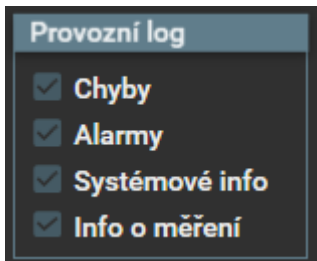


Only basic data such as error states, measurement information, etc. are recorded in the operating log.

Figure 27: Operational log

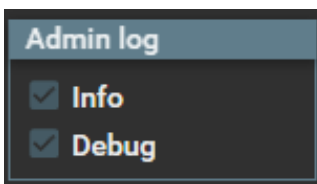

More detailed information about the program and machine functions is written into the extended (admin) log.

Figure 28: Extended log

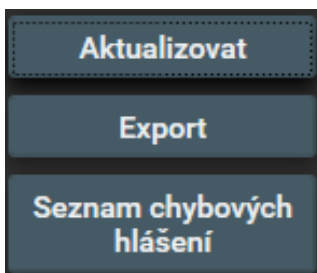

The "Update" button will reload the data from the file to the screen.

Use the "Export" button to export the displayed list to a file and then send it for analysis.

Displays all machine error messages..

Figure 29: Log control buttons